
# Care and Cleaning:

Never use abrasives or abrasive cleaning agents to clean this product. Clean regularly with contamination free warm soapy water and a damp soft cloth.

Periodically the filter washer should be removed from the end of the shower hose and cleaned.

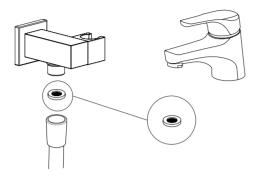

# WALL OUTLET BRACKET Installation Guide

# **Technical Specifications:**

### **Operating Pressure:**


Min: 35kPa/0.35bar Max: 500kPa/5.0bar\* Optimum: 150kPa/1.5bar - 500kPa/5bar


### **Operating Temperature:**

Hot: Max 80°C\* Cold: Min 5°C

Inlet Connections: All <sup>1</sup>/<sub>2</sub>" BSP

\* Regional specific regulations apply. Please refer to your warranty statement at www.methven.com

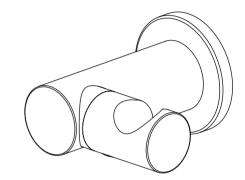

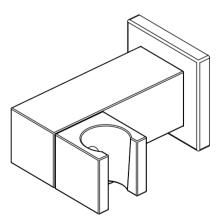

Methven warrants this product against manufacturing defects and that it is suitable for use under the general operating conditions specified in this instruction sheet. However, regional regulations apply and may affect your warranty. Please refer to **www.methven.com** or call customer service for full details.

New Zealand 0800 804 222 Australia 1300 638 483

UK 0800 195 1602

98-0277

ISSUE A DECEMBER 2015



# **IMPORTANT:** Please read all of the instructions before installation.

### General:

- Methven recommends this product is installed by a licensed plumber in compliance with all relevant regional regulations.
- After installation all connections must be checked for leaks.
- All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.
- It is the responsibility of the installer to ensure a waterproof seal is achieved between the product and mounting surface. If in doubt about the quality of the seal, remove the product and reinstall using silicone to ensure a seal is achieved.

0-ring


**IMPORTANT:** Before you begin, turn off the water supply.

### Step 1

- Wall lining hole should be cut or finished as per the dimension shown in the diagram on the right.
- Cut off the threaded nipple 18±2mm from the wall lining and apply thread seal tape to ensure a good seal.

### Step 2

• Secure wall outlet bracket to the nipple by screwing until the sealing o-ring is tight against the wall lining.

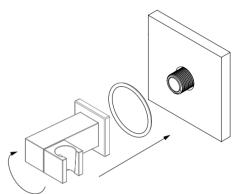



# Faceplate Outlet Bracket Image: Contract of the second se

Grub Screw

### Step 3

- · Connect hose to outlet bracket and handset.
- Ensure swivelling cone is connected to the handset.

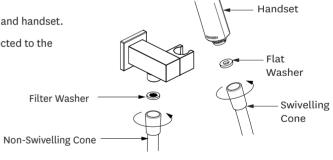

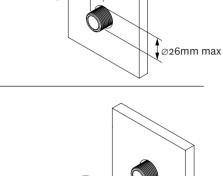

18±2mm

# HANDSET Installation Guide

# **Technical Specifications:**

# **Operating Pressure:**

Min: 150kPa/1.5bar Max: 500kPa/5bar\*


# **Operating Temperature:**


Hot: Max 70°C\* Cold: Min 5°C

### Inlet Connections:

¹⁄₂" BSP

\* Regional specific regulations apply. Please refer to your warranty statement at www.methven.com

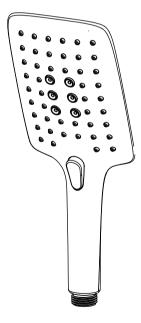

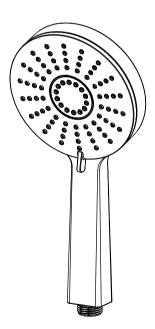




# **IMPORTANT:** Please read all of the instructions before installation.

# General:

- Methven recommends this product is installed by a licensed plumber in compliance with all relevant regional regulations.
- After installation all connections must be checked for leaks.
- All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.
- It is the responsibility of the installer to ensure a waterproof seal is achieved.
- NOTE: Some showers may not provide an effective shower when used with gravity fed heated water systems or where pressures are less than 150kPa/1.5bar at the outlet. Additionally showers with flow rates of less than 9L/min may not allow the following to function correctly:
  - some instantaneous water heaters
  - some tempering valves
  - some thermostatic mixing valves

### Step 1

· Connect hose to outlet bracket and handset.

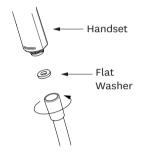

## **Care and Cleaning:**

Never use abrasives or abrasive cleaning agents to clean this product. Clean regularly with contamination free warm soapy water and a damp soft cloth.

A filter washer should be installed in the hose cone on the water outlet and it should be cleaned periodically.

If shower performance is compromised by the build-up of lime-scale, soak in limescale remover for up to 10 minutes. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the shower. Always rinse the shower thoroughly after cleaning to remove cleaning products that can damage the shower.

Never insert objects into the spray nozzles or attempt to remove limescale with sharp objects or abrasives.

Methven warrants this product against manufacturing defects and that it is suitable for use under the general operating conditions specified in this instruction sheet. However, regional regulations apply and may affect your warranty. Please refer to **www.methven.com** or call customer service for full details.

New Zealand	Australia	UK
0800 804 222	1300 638 483	0800 195 1602

ISSUE A DECEMBER 2015