
Elbow Installation (if supplied):


Step 1

- Install ½" BSP nipple at the desired elbow position.
- Wall lining hole should be cut or finished as per the dimension shown in the diagram on the right.
- Cut off the threaded nipple 13±2mm from the wall lining and apply thread seal tape to ensure a good seal.

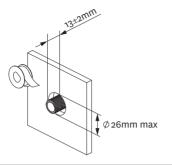

Step 2

- Screw the elbow onto the nipple ensuring that the o-ring is sufficiently compressed to create a watertight seal.
- Ensure that the elbow is oriented vertically with the outlet oriented downwards.



Care and Cleaning:

Never use abrasives or abrasive cleaning agents to clean this product. Clean regularly with contamination free warm soapy water and a damp soft cloth.

Periodically the filter washer should be removed from the end of the shower hose and cleaned.



Methven warrants this product against manufacturing defects and that it is suitable for use under the general operating conditions specified in this instruction sheet. However, regional regulations apply and may affect your warranty. Please refer to **www.methven.com** or call customer service for full details.

New Zealand 0800 804 222 Australia 1300 638 483 UK 0800 195 1602

439981 ISSUE C


ROUND RAILInstallation Guide

Technical Specifications:

Inlet Connections:

All 1/2" BSP

* Regional specific regulations apply.
Please refer to your warranty statement at
www.methven.com

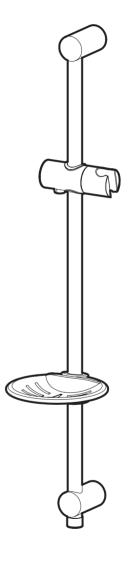




IMPORTANT: Please read all of the instructions before installation.

General:

- · This product must be installed in compliance with all relevant regional regulations.
- It is the responsibility of the installer to ensure a waterproof seal is achieved between the product and mounting surface. If in doubt about the quality of the seal, remove the product and reinstall using silicone to ensure a seal is achieved.
- · All pipe work must be thoroughly flushed prior to the installation of the hose.
- After installation all connections must be checked for leaks.
- All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.

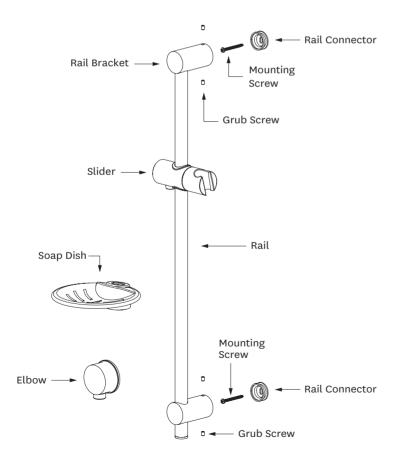

Step 1


 Mount the rail connectors in desired position with the screws. Check the connectors are vertically aligned

Maximum centre distance between the connectors is 620mm.




Step 2

 Slide the soap dish and bottom rail bracket onto the rail.



Step 3

- Check the grub screws in the rail brackets are wound out.
- Match the rail brackets to the connectors and push rail into place.
- · Tighten grub screws top and bottom

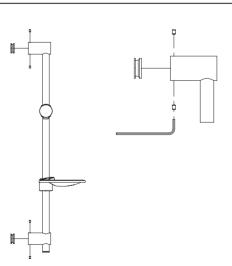

HANDSET Installation Guide

Technical Specifications:

Operating Pressure:

Min: 35kPa/o.35bar Max: 500kPa/5bar*

Optimum: 150kPa/1.5bar - 500kPa/5bar

Operating Temperature:

Hot: Max 70°C* Cold: Min 5°C

Inlet Connections:

1/2" BSP



Operating Pressure:

Min: 150kPa/1.5bar Max: 500kPa/5bar*

Optimum: 150kPa/1.5bar - 500kPa

Operating Temperature:

Hot: Max 70°C* Cold: Min 5°C

Inlet Connections:

1/2" BSP



* Regional specific regulations apply. Please refer to your warranty statement at www.methven.com



IMPORTANT: Please read all of the instructions before installation.

General:

- Methven recommends this product is installed by a licensed plumber in compliance with all relevant regional regulations.
- After installation all connections must be checked for leaks.
- All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.
- It is the responsibility of the installer to ensure a waterproof seal is achieved.
- NOTE: Some showers may not provide an effective shower when used with gravity fed heated water systems or where pressures are less than 150kPa/1.5bar at the outlet. Additionally showers with flow rates of less than 9L/min may not allow the following to function correctly:
 - some instantaneous water heaters
 - some tempering valves
 - some thermostatic mixing valves

Low and Unequal Pressure:

Removal of the flow restrictor in the handset may be necessary to optimise flow performance in low or unequal pressure systems only.

Care and Cleaning:

Never use abrasives or abrasive cleaning agents to clean this product. Clean regularly with contamination free warm soapy water and a damp soft cloth.

A filter washer should be installed in the hose cone on the water outlet and it should be cleaned periodically.

If shower performance is compromised by the build-up of lime-scale, soak in limescale remover for up to 10 minutes. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the shower. Always rinse the shower thoroughly after cleaning to remove cleaning products that can damage the shower.

Methven warrants this product against manufacturing defects and that it is suitable for use under the general operating conditions specified in this instruction sheet. However, regional regulations apply and may affect your warranty. Please refer to **www.methven.com** or call customer service for full details.

 New Zealand
 Australia
 UK

 0800 804 222
 1300 638 483
 0800 195 1602

439902 ISSUE A