
Ceramic Cartridge Adjustment

Do not remove the ceramic cartridge from the body assembly while carrying out the following adjustments. *Note: the cartridge is factory set for maximum temperature*


Remove half-dome (if attached)



Flow limiting adjustment

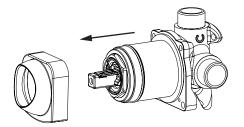

Mix temperature limiting adjustment



Methven warrants this product against manufacturing defects and that it is suitable for use under the operating conditions specified in this instruction sheet.

For your warranty please refer to www.methven.com or call Customer Service

New Zealand 0800 804 222 Australia 1300 638 483 USA 1800 975 5409 UK 0800 195 1602

436731 Issue B

WAIPORI SHOWER MIXER INSTALLATION GUIDE

TECHNICAL SPECIFICATIONS

Operating Pressure:

Min 150kPa, Max 1000kPa.
Recommended 150-500kPa.
Recommended installation of a pressure limiting valve if supply exceeds 500kPa.

Operating Temperature:

Hot: Min 55°C (at mixer), Max 80°C. Cold: Min 5°C.

NB: New Zealand Building Code Clause G12 - Water Supplies specifies all outlets used primarily for personal hygiene shall deliver water at a safe temperature.

Inlet Connections:

All 1/2" BSP.





IMPORTANT

Please read all of the instructions before installation

Avoid restrictive piping, fittings or sharp angled bends when plumbing the mixer.

Do not hydrostatic test the installation with this mixer installed. Damage to the ceramic cartridge may occur.

All pipe-work must be thoroughly flushed prior to installation of the mixer. In-line filters must be installed on both hot and cold supplies to prevent foreign particles damaging the ceramic cartridge.

NOTE: It is the responsibility of the installer to ensure a water proof seal is achieved between the faceplate and finished surface of the wall. If in any doubt about the quality of the seal the faceplate seal should be removed and then reinstalled using silicon to ensure a seal is achieved.

